EXAMPLE OF APPLICATION

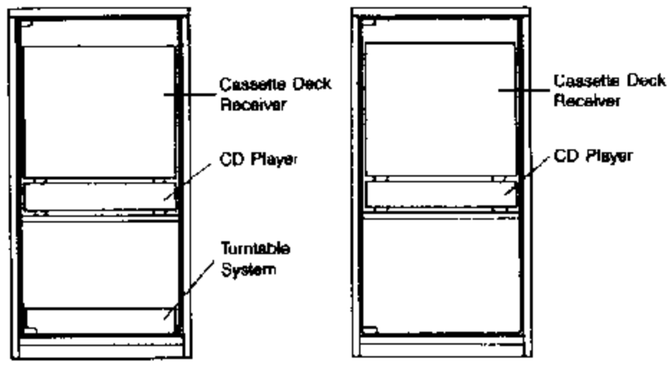

With Turntable System

Without Turntable System

If the CD player disc tray touches the glass door when the glass door is open, place the CD player on the right side of the shelf.

Sony Corporation printed in U.S.A.

T-9652-573-1

SONY

AUDIO RACK

SU-S2210/2510

INSTRUCTIONS

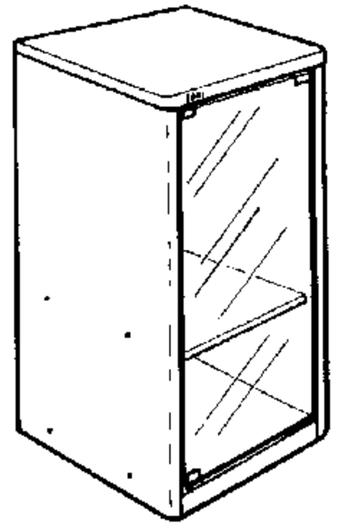

Assembled rack

© 1992 by Sony Corporation

NOTES ON ASSEMBLY

- You will need a medium size Phillips head screwdriver and a mallet.
- Assemble the rack near the location where the rack will be used.
- To prevent damaging the floor or the rack, work on a rug or carpet.
- The circled numbers in the illustrations are the same as the part numbers in the "PARTS LIST." For easier assembly, line up the parts in the order they will be required.

NOTES ON USE

- Do not place the rack in a location near a heat source, such as a radiator, or in a place subject to direct sunlight.
- Clean the rack periodically with a soft cloth. If finger prints, food and beverage stains, etc., are difficult to remove, use a cloth moistened with a mild detergent solution. Do not use a scouring powder, abrasive pad or solvent.
- Before closing the glass door, make sure that the cassette holder of a cassette deck is closed.
- Place the rack a few centimeters apart from a pair of speaker systems to avoid a howling effect.

PARTS LIST SU-S2210

ITEM	DESCRIPTION	QTY.	PART NO.
1	Right Upright	1	T-9652-568-1
2	Left Upright	1	T-9652-569-1
3	Top Panel	1	T-9652-570-1
4	Upper Shelf	1	T-9652-449-1
5	Bottom Shelf	1	T-9652-571-1
6	Kick Plate	1	T-9652-572-1
7	Back Panel (A)	1	T-9652-452-1
8	Back Panel (B)	1	T-9652-576-1
9	Glass Door	1	T-9652-454-1
A	Catch Plate	1	T-9652-455-1
B	Catch Plate Pad	1	T-9652-456-1

ITEM	DESCRIPTION	QTY.	PART NO.
C	Upper Hinge	1	T-9652-481-1
D	Lower Hinge		
E	Hinge Insert		
F	Magnet Catch	1	T-9652-269-1
G	Dowel	8	T-9652-202-1
H	Cam Casting	4	T-9652-460-1
I	Connecting Bolt	4	T-9652-461-1
J	Confirmat Screw	8	T-9652-242-1
K	Screw 3x12	2	T-9652-213-1
L	Screw 5x40	2	T-9652-349-1
M	Screw #6 5/8"	13	T-9652-215-1
N	Allen Wrench	1	T-9652-209-1

CUSTOMER SERVICE INFORMATION

Please examine all packing material before discarding. Shortages can occur by leaving parts in packing material.

If any parts are missing or damaged, please review the above parts list, identify the missing or damaged part, and call or write to the Sony Customer Information Center listed below.

SONY CUSTOMER INFORMATION CENTER

1-800-551-7669 For All Residents EXCEPT New Jersey
1-201-930-7669 For New Jersey Residents ONLY

Or write to:

Sony Customer Information Center
Sony Drive, Mail Drop #T1-11
Park Ridge, NJ 07656-8003

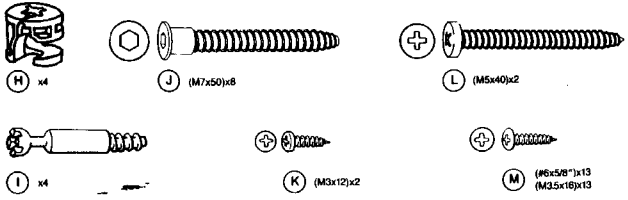

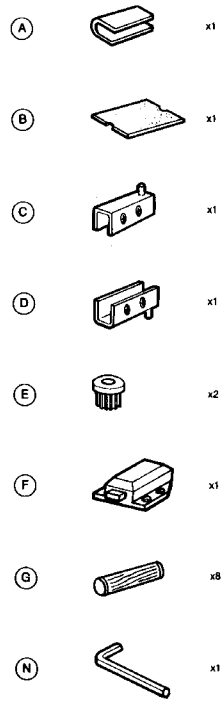

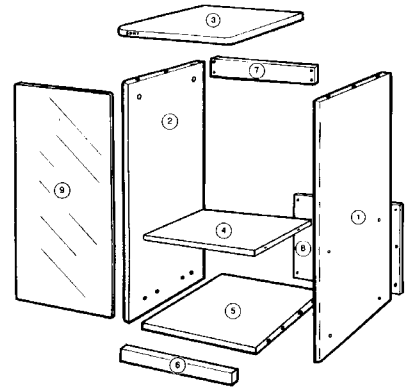

DIMENSIONS

Unit: mm

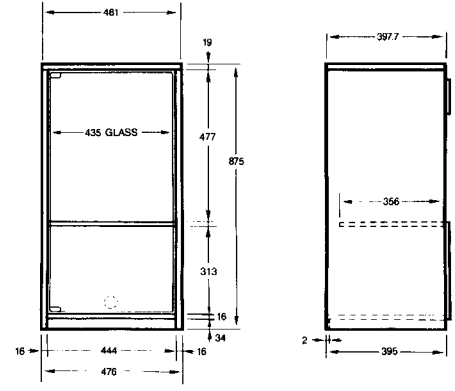

Net Weight: 42 lbs.

Arrow direction shows front.

1

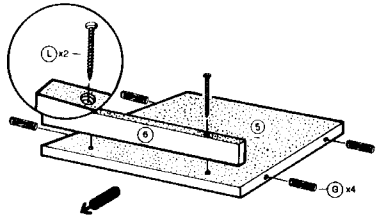

2

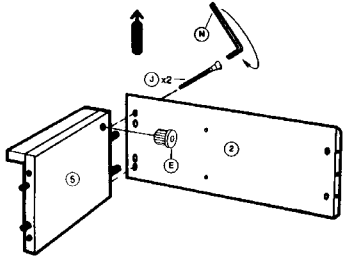

3

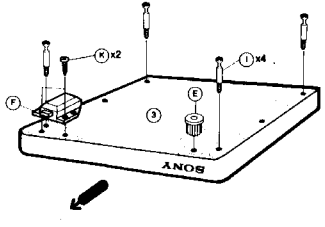

4

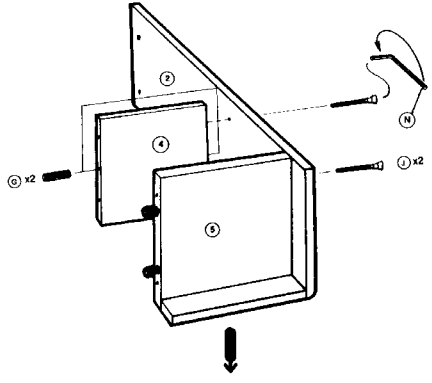

5

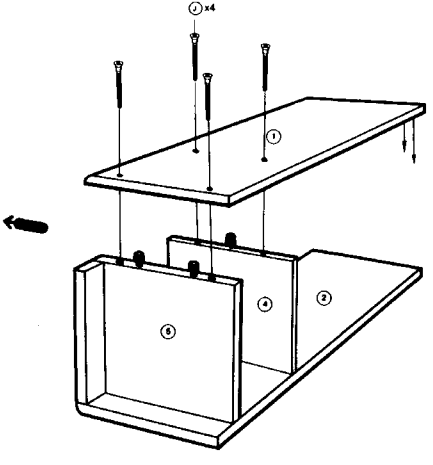

6

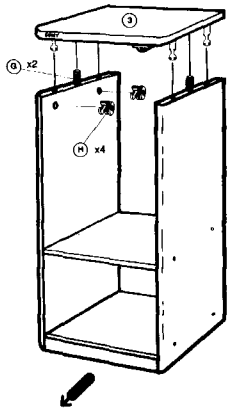

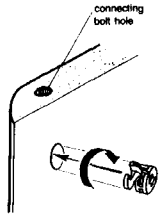

Insert cam with the arrow pointing to the connecting bolt hole and tighten with a screwdriver or an allen wrench.

7

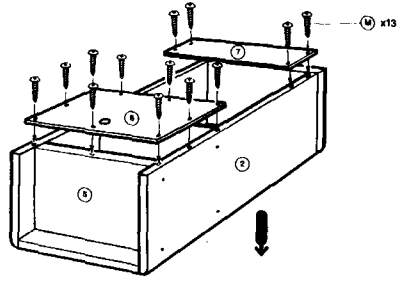

8

Install the stereo components referring to the "**EXAMPLES OF APPLICATION.**"

9

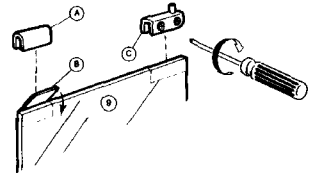

Door clearance adjustment

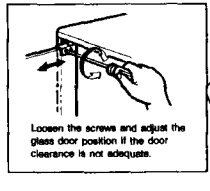

Loosen the screws and adjust the glass door position if the door clearance is not adequate.

10

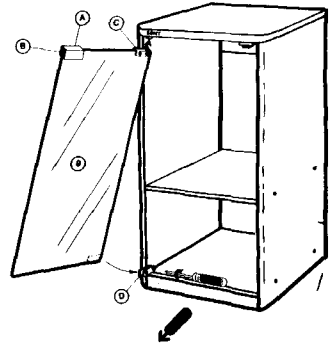

Opening and/or closing the door

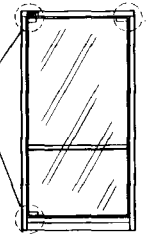

Push here to close.
To open, push again.

Tempered Glass
The glass panel in this rack is made of tempered glass.
Although it is more shock-resistant than ordinary glass, tempered glass may shatter if it receives a sudden shock. Be careful not to drop or scratch the glass.

NOTE: For your protection always remove the glass before attempting to move the rack.